

Ausgabe Deutsch 04/2015 / Dokumentation © 2015 eQ-3 AG, Deutsc Alle Rechte vorbehalten. / CC-RT-BLE-SB, V1.1, Art-Nr. 142279 nds GmbH / Romain-Rolland-Str. 14-24 / 13089 Berlin / Germany / www.s

#### 1. Hinweise zu dieser Anleitung

Lesen Sie diese Anleitung vollständig und sorgfältig, bevor Sie das Gerät in Betrieb nehmen. Sie enthält zahlreiche Hinweise zum bestimmungsgemäßen Einsatz des Gerätes. Beachten Sie insbesondere die Sicherheitshinweise. Bewahren Sie die Anleitung zum späteren Nachschlagen auf. Wenn Sie das Gerät anderen Personen zur Nutzung überlassen, übergeben Sie bitte auch diese Anleitung.

Benutzte Symbole:

Achtung! Hier wird auf eine Gefahr hingewiesen.

Hinweis. Dieser Abschnitt enthält zusätzliche wichtige Informationen.

## 2. Lieferumfang

1x Heizkörperthermostat, 1x Adapter Danfoss RA, 1x Stützring, 1x Mutter M4, 1x Zylinderkopfschraube M4 x 12 mm, 2x 1,5 V Mignon/LR6/AA, 3x Bedienungsanleitung in Deutsch/Englisch, Französisch/Niederländisch, Polnisch/Italienisch

#### 3. Geräteübersicht

- Überwurfmutter zur Montage am Heizungsventil
- Eingestellte Schaltzeiträume im Wochenprogramm
- Absenk-/Komfort-Temperatur (∰), Fenster-auf-Funktion (☐), Manueller Betrieb (Manu), Automatikbetrieb (Auto)
- D Urlaubsfunktion (♠), Wochentag, Batterie-leer-Symbol (♠)
- E Mode-/Menu-Taste: Wechsel zwischen Automatikbetrieb, manuellen Betrieb und Urlaubsfunktion (Taste kurz drücken); Öffnen des Konfigurationsmenüs (Taste mind. 3 Sekunden drücken)
- Stellrad: Einstellungen vornehmen, z. B. Temperatur (durch Drehen des Stellrads), Aktivierung der Boost-Funktion und Bestätigen bzw. Speichern von Einstellungen im Menü (kurzes Drücken des Stellrads)
- G C♥-Taste: Umschalten zwischen Absenk-/
- Temperaturanzeige, Zeit-/Datumsanzeige, Menüpunkte, Funktionen

### 4. Allgemeine Funktion

Der elektrische BLUETOOTH® Smart Heizkörperthermostat ermöglicht eine zeitgesteuerte Regulierung der Raumtemperatur über eine intuitiv bedienbare App. Die kostenlose App "calor BT" ist für iOS- und Android-Smartphones verfügbar. Der Heizkörperthermostat dient zur Regulierung einzelner Heizkörper bzw. der Raum-

Durch vorprogrammierte oder individuelle Heiz- und Absenkphasen kann die gewünschte Temperatur komfortabel eingestellt werden.

Der Heizkörperthermostat passt auf alle gängigen Heizkörperventile und ist einfach zu montieren - ohne Ablassen von Heizungswasser oder einen Eingriff in das Heizungssystem. Die Boost-Funktion ermöglicht ein schnelles, kurzzeitiges Aufheizen des Heizkörpers durch vollständige Öffnung des Ventils. Durch eine automatische "Fenster-auf-Erkennung" wird zusätzlich Energie während des Lüftens gespart.

## 5. Bestimmungsgemäßer Einsatz

Der Heizkörperthermostat dient zum Regulieren eines gängigen Heizkörperventils. Betreiben Sie das Gerät nur in Innenräumen und vermeiden Sie den Einfluss von Feuchtigkeit, Staub sowie Sonnen- oder Wärmebestrahlung. Jeder andere Einsatz als der in dieser Bedienungsanleitung beschriebene ist nicht bestimmungsgemäß und führt zu Garantie- und Haftungsausschluss. Dies gilt auch für Umbauten und Veränderungen. Das Gerät ist ausschließlich für den privaten Gebrauch gedacht.

Hiermit erklärt die eQ-3 AG, dass sich dieses Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet. Die vollständige Konformitätserklärung finden Sie unter www.eQ-3.de.

## Sicherheitshinweise

Das Gerät ist kein Spielzeug; erlauben Sie Kindern nicht damit zu spielen.

Lassen Sie Verpackungsmaterial nicht achtlos liegen. Dies kann für Kinder zu einem gefährlichen Spielzeug werden.

Öffnen Sie das Gerät nicht, es enthält keine durch den Anwender zu wartenden Teile. Im Fehlerfall lassen Sie das Gerät von einer Fachkraft prüfen

## 7. Entsorgungshinweise

## Gerät nicht im Hausmüll entsorgen!

Elektronische Geräte sind entsprechend der Richtlinie über Elektro- und Elektronik-Altgeräte über die örtlichen Sammelstellen für Elektronik-Altgeräte zu entsorgen!

C E Das CE-Zeichen ist ein Freiverkehrszeichen, das sich ausschließlich an die Behörden wendet und keine Zusicherung von Eigenschaften beinhaltet.

Verbrauchte Batterien gehören nicht in den Hausmüll! Entsorgen Sie diese in Ihrer örtlichen Batteriesammelstelle!

## 8. Batterien einlegen (wechseln)


Im Auslieferungszustand sind die Batterien bereits eingelegt. Entfernen Sie einfach den Isolierstreifen.

Um die Batterien zu wechseln, gehen Sie wie folgt vor:

• Drücken Sie den Batteriefachdeckel an den Einkerbungen

- auf beiden Seiten mit den Fingern ein und ziehen Sie ihn nach unten ab.
- Legen Sie 2 neue Batterien vom Typ LR6/Mignon/AA (1,5 V) polungsrichtig in das Batteriefach ein.
- · Setzen Sie den Batteriefachdeckel wieder auf und rasten Sie ihn ein.

Die Lebensdauer neuer Alkaline Batterien beträgt ca. 2 Jahre. Ein Batteriesym-Die Lebensdauer neuer Arkaline Datterlien betragt aus der Batterlien auszutauschen sind. Nach Entnahme der leeren Batterien sollte bis zum Einlegen der neuen Batte-



## 9. Datum und Uhrzeit einstellen

Wenn Batterien eingelegt wurden, werden nach kurzer Anzeige der Firmware-Versionsnummer und kurzem Motorlauf ("InS") automatisch Datum und Uhrzeit abgefragt. Stellen Sie Jahr, Monat, Tag, Stunde und Minute durch Drehen des Stellrads ein und bestätigen Sie durch kurzes Drücken des Stellrads (F).

Datum und Uhrzeit können Sie auch später im Menü unter "dAt" einstellen.

Während der Eingabe von Datum und Uhrzeit fährt der Motor den Steuerstift bereits zurück.

rückfährt. Sobald der Heizkörperthermostat am Ventil montiert werden kann, steht

nur "InS" im Display.


Das Wochenprogramm und andere Einstellungen können vor der Montage angepasst werden. Drücken Sie dazu die Mode/Menu-Taste, während in der Anzeige "InS" steht. Mehr Details finden Sie ab Abschnitt "13. Steuerung und Konfiguration".

Nach abgeschlossener Programmierung steht erneut "InS" im Display und die Montage kann erfolgen.

#### 10. Montage am Heizkörper

Die Montage des Heizkörperthermostaten ist einfach und kann ohne Ablassen von Heizungswasser oder Eingriff in das Heizungssystem erfolgen. Spezialwerkzeug oder ein Abschalten der Heizung sind nicht erforderlich. Die am Heizkörperthermostat angebrachte Überwurfmutter ist universell einsetzbar und ohne Zubehör passend für alle gängigen Ventile mit dem Gewindemaß M30  $\times$  1,5 mm.

- Drehen Sie den Thermostatkopf auf den Maximalwert (gegen den Uhrzeigersinn). Der Thermostatkopf drückt jetzt nicht mehr auf die Ventilspindel und kann so leichter demontiert werden. Entfernen Sie den alten Thermostatkopf. Setzen
- Sie bei Bedarf den beiliegenden Stützring oder Adapter auf.
  Montieren Sie den Heizkörperthermostat auf das




#### 10.1 Stützring und Adapter für Danfoss

Bei Bedarf legen Sie den beiliegenden Stützring (I) vor der Montage in den Flansch des Gerätes ein, um einen festeren Sitz am Ventil zu ermöglichen. Zur Montage auf Danfoss RA-Ventile kann der beiliegende Adapter verwendet wer-

den. Die Ventilkörper von Danfoss weisen umlaufend längliche Einkerbungen (K) auf, die auch einen besseren Sitz des Adapters nach dem Aufrasten gewährleisten

Achten Sie bei der Montage darauf, dass die Zapfen im Inneren des Adapters 0 (J) eine deckungsgleiche Position zu den Einkerbungen (K) am Ventil haben. Rasten Sie den Adapter vollständig auf.

Achten Sie bei der Montage darauf, sich nicht die Finger zwischen den Adapterhälften einzuklemmen!

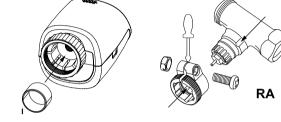

#### 11. Adaptierfahrt

Nach dem Einlegen der Batterien und der Montage am Ventil wird zur Anpassung an das Ventil eine Adaptierfahrt ("AdA") durchgeführt.

 Sobald der Heizkörperthermostat auf dem Ventil montiert wurde, drücken Sie kurz auf das Stellrad, wenn im Display "InS" steht.

Während der Adaptierfahrt werden "AdA" und das Aktivitätssymbol ( ) im Display angezeigt. In der Zwischenzeit ist keine Bedienung möglich.

Wurde die Adaptierfahrt vor der Montage eingeleitet, drücken Sie kurz auf das Stellrad und der Motor fährt zurück zur Position "InS". Wird eine Fehlermeldung (F1, F2, F3) angezeigt, fährt der Motor ebenfalls zurück zur Position "InS".

#### 12. Display-Inhalt im Normalbetrieb

Im Normalbetrieb werden Schaltzeiträume, Betriebsmodus, Soll-Temperatur und Wochentag angezeigt.

für jedes zweite Zeitintervall angezeigt.



### 13. Steuerung und Konfiguration

Nachdem Sie den Heizkörperthermostat montiert und in Betrieb genommen haben, kann das Gerät individuell gesteuert und konfiguriert werden. Die Steuerung und Konfiguration kann entweder per BLUETOOTH® über die App "calor BT" oder direkt am Gerät erfolgen

## 13.1 Steuerung und Konfiguration über App

Um das Gerät per App zu steuern, gehen Sie wie folgt vor:

Laden Sie die App "calor BT" aus dem App Store für iOS oder Android herunter und installieren Sie diese auf Ihrem Smartphone.

Folgen Sie den Anweisungen in der App.

Sie können den Heizkörperthermostat anschließend über die App steuern und kon-

## 13.2 Steuerung und Konfiguration direkt am Gerät

Um die Steuerung und Konfigurationen direkt am Gerät vorzunehmen, gehen Sie wie in den nachfolgend beschriebenen Abschnitten vor.

## 13.2.1 Wochenprogramm (Pro)

Im Wochenprogramm lassen sich für jeden Wochentag separat bis zu 3 Heizphasen (7 Schaltzeitpunkte) einstellen. Die Programmierung erfolgt für die ausgewählten Tage, wobei für einen Zeitraum von 00:00 bis 23:59 Uhr Temperaturen hinterlegt werden können

- Drücken Sie die Mode-/Menu-Taste mindestens 3 Sekunden. Im Display erscheint "Pro". Bestätigen Sie durch kurzes Drücken des Stellrads.

  Im Display erscheint "dAy". Mit dem Stellrad sind einzelne Wochentage, alle Werk-
- tage, das Wochenende oder die gesamte Woche auswählbar.
- Bestätigen Sie durch kurzes Drücken des Stellrads.
- Der erste Schaltzeitpunkt wird angezeigt (0:00). Dieser kann nicht verändert werden. Die Heizzeiten werden als Balken angezeigt.
- Bestätigen Sie durch kurzes Drücken des Stellrads.
- Stellen Sie die Temperatur ein, die ab 0:00 Uhr gewünscht ist.
  Bestätigen Sie durch kurzes Drücken des Stellrads.
- Der nächste Schaltzeitpunkt wird angezeigt. Diesen können Sie individuell anpassen. • Stellen Sie anschließend die Temperatur ein, die ab der gewünschten Uhrzeit vorherrschen soll.
- Diesen Vorgang können Sie wiederholen, bis die weiteren gewünschten Tempe raturen für den Zeitraum von 0:00 bis 23:59 Uhr hinterlegt sind.
- Sind alle 7 Schaltzeitpunkte belegt, wird 23:59 Uhr als Endzeitpunkt zum Bestä-

Im Auto-Modus kann die Temperatur jederzeit auch über das Stellrad verändert werden. Die geänderte Temperatur bleibt dann bis zum nächsten Schaltzeitpunkt erhalten

## 13.2.2 Datum und Uhrzeit einstellen (dAt)

Über das Menü können jederzeit das Datum und die Uhrzeit angepasst werden. • Drücken Sie die Mode-/Menu-Taste mindestens 3 Sekunden.

• Wählen Sie mit dem Stellrad den Menüpunkt "dAT" aus. Stellen Sie Jahr, Monat, Tag, Stunde und Minute durch Drehen des Stellrads ein

und bestätigen Sie durch kurzes Drücken des Stellrads.

## 13.2.3 Umschalten Sommer-/Winterzeit (dSt)

13.2.4 Fenster-auf-Funktion (AEr)

Für den Heizkörperthermostat kann eine automatische Umschaltung zwischen Sommer- und Winterzeit aktiviert bzw. deaktiviert werden. Werkseitig ist die automatische Umschaltung aktiviert. Drücken Sie die Mode-/Menu-Taste mindestens 3 Sekunden

- Wählen Sie mit dem Stellrad den Menüpunkt "dSt" aus.
- Bestätigen Sie die Auswahl durch kurzes Drücken des Stellrads. • Im Display erscheint "OFF", wenn die Funktion deaktiviert werden soll oder "On",
- wenn die Funktion aktiviert werden soll.

## • Bestätigen Sie Ihre Auswahl durch kurzes Drücken des Stellrads.

## Der Heizkörperthermostat erkennt bei einer stark absinkenden Temperatur automa-

tisch, dass ein Raum gelüftet wird. Um Heizkosten zu sparen, wird dann die Temperatur für einen bestimmten Zeitraum herunter geregelt (werkseitig 15 Minuten). Währenddessen wird im Display das Fenster-auf-Symbol ( ) angezeigt. Drücken Sie die Mode-/Menu-Taste mindestens 3 Sekunden

- Wählen Sie mit dem Stellrad den Menüpunkt "AEr" und bestätigen Sie durch kurzes Drücken des Stellrads.
- Die Temperatur und die Zeit lassen sich mit dem Stellrad einstellen. Mit der Zeitauswahl "0" lässt sich die Funktion deaktivieren.

#### 13.2.5 Offset-Temperatur einstellen (tOF)

Da die Temperatur am Heizkörper gemessen wird, kann es an einer anderen Stelle im Raum kälter oder wärmer sein. Um dies anzugleichen, kann ein Temperatur-Offset von bis zu ±3.5 °C eingestellt werden. Werden z. B. 18 °C anstatt eingestellter

- 20 °C im Raum erreicht, ist ein Offset von -2.0 °C einzustellen.

   Drücken Sie die Mode-/Menu-Taste mindestens 3 Sekunden.
- Wählen Sie mit dem Stellrad den Menüpunkt "tOF" aus und bestätigen Sie durch kurzes Drücken des Stellrads.
- Drehen Sie das Stellrad so lange, bis die gewünschte Temperatur erscheint.
- Bestätigen Sie durch kurzes Drücken des Stellrads.

#### 13.2.6 BLUETOOTH® aktivieren/deaktivieren (bLE)

Die BLUETOOTH® Funktion des Heizkörperthermostaten kann manuell aktiviert bzw. deaktiviert werden.

- Drücken Sie die Mode-/Menu-Taste mindestens 3 Sekunden.
- · Wählen Sie mit dem Stellrad den Menüpunkt "bLE" aus und bestätigen Sie durch
- kurzes Drücken des Stellrads.
   Im Display erscheint "OFF", wenn die Funktion deaktiviert werden soll oder "On", wenn die Funktion aktiviert werden soll.
- Bestätigen Sie durch kurzes Drücken des Stellrads.

Die Werkseinstellungen des Heizkörperthermostaten können manuell wieder hergestellt werden. Dabei gehen alle vorgenommenen Einstellungen verloren.

- Wählen Sie mit dem Stellrad den Menüpunkt "rES" aus und bestätigen Sie durch kurzes Drücken des Stellrads.
- Anschließend erscheint "COnF" im Display.
- Bestätigen Sie durch kurzes Drücken des Stellrads.

#### 13.2.8 Boost-Funktion

Kommen Sie z. B. früher nach Hause und möchten es schnell warm haben, hilft Ihnen die Boost-Funktion. Bei Aktivierung der Boost-Funktion wird das Heizungsventil sofort für 5 Minuten auf 80 % geöffnet. Die Erwärmung eines Raumes dauert zwar länger als 5 Minuten, die vom Heizkörper abgegebene Wärme kann dennoch sofort

- Die verbleibende Funktionsdauer wird im Sekundentakt heruntergezählt ("b300" bis "b000").
- · Nach Ablauf dieser 5 Minuten wechselt der Heizkörperthermostat in den vorher aktiven Modus (Auto/Manu) mit der vorher eingestellten Temperatur.
- Die Boost-Funktion hat keinen unmittelbaren Effekt, wenn der Heizkörper verdeckt ist (z.B. durch ein Sofa). Die Fenster-auf-Funktion ist während der Boost-

13.2.9 Urlaubsfunktion einstellen Die Urlaubsfunktion kann genutzt werden, wenn für einen bestimmten Zeitraum eine feste Temperatur gehalten werden soll (z.B. während eines Urlaubs oder einer Party).

• Drücken Sie die Mode-/Menu-Taste so oft kurz, bis im Display das Koffersymbol

- Stellen Sie über das Stellrad die Uhrzeit ein, bis zu der die Temperatur gehalten werden soll und bestätigen Sie durch kurzes Drücken des Stellrads. Stellen Sie das Datum ein und bestätigen Sie durch kurzes Drücken des Stellrads.
- Stellen Sie die Temperatur ein und bestätigen Sie durch kurzes Drücken des

Die eingestellte Temperatur bleibt bis zum vorgegebenen Zeitpunkt bestehen. Danach wechselt der Heizkörperthermostat in den Auto-Modus.

13.2.10 Komfort- und Absenk-Temperatur Über die Taste Komfort-/Absenk-Temperatur (🦝) kann zwischen diesen beiden

- Halten Sie die Komfort-/Absenktaste ( C☼ ) für mindestens 3 Sekunden gedrückt. Im Display erscheinen das Sonnensymbol (☼) und die aktuell hinterlegte Kom-
- fort-Temperatur. Verändern Sie die Temperatur mit dem Stellrad und bestätigen Sie durch kurzes
- Drücken des Stellrads.

  Im Display erscheinen das Mondsymbol ( ) und die Absenk-Temperatur.

  Verändern Sie die Temperatur mit dem Stellrad und bestätigen Sie durch kurzes

Auch im Auto-Modus kann die Temperatur über die Taste jederzeit geändert werden. Diese bleibt dann bis zum nächsten Schaltzeitpunkt des Programms erhalten.

## 13.2.11 Heizpause aktivieren (Batterieschonung)

Ist die Heizung im Sommer abgeschaltet, können die Batterien geschont werden. Dazu wird das Ventil ganz geöffnet. Der Verkalkungsschutz wird weiter durchgeführt.

Um Batterien zu schonen, kann zudem die BLUETOOTH® Funktion deaktiviert werden (siehe Abschnitt "13.2.6 Bluetooth® aktivieren/deaktivieren (bLE)" auf

Zum Aktivieren der Heizpause gehen Sie wie folgt vor:

- Drehen Sie das Stellrad im manuellen Betrieb (Manu) so lange nach rechts, bis
- Stellrad nach links.
- 13.2.12 Frostschutzbetrieb einstellen Wenn ein Raum nicht geheizt werden soll, kann das Ventil geschlossen werden.

Nur bei Frostgefahr wird das Ventil geöffnet. Der Verkalkungsschutz wird weiter durchgeführt. Drehen Sie das Stellrad im manuellen Betrieb (Manu) so lange nach links, bis im

- Display "OFF" erscheint.

## 13.2.13 Kindersicherung / Bediensperre

- Die Bedienung des Gerätes kann gesperrt werden.
- Zur Aktivierung/Deaktivierung der Bediensperre, drücken Sie die Tasten Mode-/ Menu und **©**kurz gleichzeitig.
- Nach erfolgreicher Aktivierung erscheint "LOC" im Display. Zur Deaktivierung der Rediens

# 14. Fehlerbehebung und Wartung

| FIODIEIII                  | Dellebully   |
|----------------------------|--|
| Batterieleistung zu gering | Batterien austauschen                                  |
| Ventilantrieb schwergängig | Installation prüfen,<br>Heizungsventil überprüfen      |
| Stellbereich zu groß       | Befestigung des Heizkörper-<br>thermostaten überprüfen |
| Stellbereich zu klein      | Heizungsventil überprüfen                              |
|                            | Ventilantrieb schwergängig Stellbereich zu groß        |

chentlich am Samstag um 12:00 Uhr eine Entkalkungsfahrt durch. Dabei erscheint "CAL" im Display

Geräte-Kurzbezeichnung: CC-RT-BLE-SB 2x 1,5 V LR6/Mignon/AA Versorgungsspannung: Stromaufnahme 100 mA max Batterielebensdauer: 2 Jahre (typ.) Schutzart: Verschmutzungsgrad: IP20 Umgebungstemperatur: Oberflächentemperatur: 5 bis 35 °C 90 °C (am Heizkörper) LC-Display M30 x 1,5 mm Display: Anschluss: Wirkungsweise: Linearer Hub: Typ 1 4,3 mm Abmessungen (B x H x T): 55 x 60 x 102 mm Gewicht: Funkfrequenz:

halten. The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and

> Other trademarks and trade names are those of their respective owners.

any use of such marks by eQ-3 AG is under license.

Technische Ände-

rungen sind vorbe-

**SWISSBRANDS** www.swissbrands.com SWISSBRANDS GmbH Romain-Rolland-Str. 14-24 Technische Änderungen vorbehalter 13089 Berlin / Germany Abbildungen ähnlich.







## 13.2.7 Werkseinstellungen wiederherstellen (rES)

Drücken Sie die Mode-/Menu-Taste mindestens 3 Sekunden.

- Drücken des Stellrads.

im Display "On" erscheint.

• Zum Beenden verlassen Sie den manuellen Betrieb (Manu) oder drehen Sie das

Zum Beenden verlassen Sie den manuellen Betrieb (Manu) oder drehen Sie das

|   | F1 | Ventilantrieb schwergängig | Heizungsventil überprüfen                              |  |  |
|---|----|----------------------------|--|--|--|
|   | F2 | Stellbereich zu groß       | Befestigung des Heizkörper-<br>thermostaten überprüfen |  |  |
|   | F3 | Stellbereich zu klein      | Heizungsventil überprüfen                              |  |  |
| Zum Schutz vor Ventilverkalkung führt der Heizkörperthermostat einmal wö- |    |                            |  |  |  |

162 g (inkl. Batterien) 2,402 GHz - 2,480 GHz Freifeldreichweite: 10 m (typ.) Serviceadresse

Swiss CC-RT-BLE\_UM\_GE\_eQ-3\_220515.indd 1 29.05.2015 10:55:23



Bluetoot

D

8888

iglish edition 04/2015 / Documentation © 2015 eQ-3 AG, Germany / All rights reserved. Translation from the original version in German. / CC-RT-BLE-SB, V1.1, 142279 duS GmbH / Romain-Rolland-Str. 14-24 / 13088 Berlin / Germany / www.swissbrands.com

#### 1. Information about this manual

Please read this manual completely and carefully before starting to use the device The manual contains important information about the intended use of the device. Especially observe the safety notes. Keep the manual for later consultation. If you hand over the device to other persons for use, please hand over this manual as well

#### Symbols used:

Attention! This indicates a hazard.

Note. This section contains important additional information. 0

## 2. Package contents

1x radiator thermostat, 1x adapter Danfoss RA, 1x support ring, 1x nut M4, 1x cylinder head screw M4 x 12 mm, 2x 1.5 V mignon/LR6/AA, 3x operating manual in German/English, French/Dutch and Polish/Italian

#### 3. Device overview

- A Union nut for fitting on the heating valve
- **B** Defined switching time periods in the week program
- Eco/comfort temperature (∰), open-window function (♠), manual mode (Manu), automatic mode (Auto)
- Holiday function ( ), weekday, empty battery symbol ( )
- Mode/Menu button: Switch between auto mode, manu mode and holiday function (press button shortly); configuration menu (press button for at least 3 seconds)
- F Control wheel: Change settings, e.g. temperature (turn the control wheel), activate the boost function and confirm/save settings in the menu (press control wheel shortly)
- H Temperature display, time/date display menu items, functions

#### 4. Function

The electric BLUETOOTH® Smart Radiator Thermostat offers individual control of the room temperature from a user-friendly and intuitive app.

The app "calor BT" is available for free for iOS and Android smartphones. The radia tor thermostat enables the regulation of single radiators or the room temperature. Thanks to pre-programmed or individually tailored heating and cooling phases, the desired temperature can be comfortably adjusted.

The radiator thermostat fits to all common radiator valves and is easy to mount without having to drain any water or intervene in the heating system. With the boost function, cool rooms can be heated within short by opening the heating valve fully. Thanks to the automatic "open window detection", additional energy can be saved during ventilation.

## 5. Intended use

 $\bigoplus$ 

The radiator thermostat is used to control a conventional radiator valve. Only operate the device in inside rooms and avoid the influence of moisture, dust and sunlight or external heat radiation. Using the device for any purpose other than that described in this operating manual does not fall within the scope of intended use and shall invalidate any warranty or liability. This also applies to any conversion or modification work. The device is intended for private use only.

eQ-3 AG hereby declares that this device complies with the essential requirements and other relevant regulations of Directive 1999/5/EC. You can find the full declaration of conformity at www.eQ-3.de.

## Safety instructions

The device is not a toy; do not allow children to play with it.

Do not leave packaging material lying around. It can be dangerous in the hands of a child.

Do not open the device: it does not contain any components that need to be serviced by the user. In the event of an error, please have the device checked by an expert.

## 7. Disposal instructions

## Do not dispose of the device with regular domestic waste!

Electronic equipment must be disposed of at local collection points for waste electronic equipment in compliance with the Waste Electrical and Electronic Equipment Directive.

The CE sign is a free trading sign addressed exclusively to the authorities and does not include any warranty of any properties.

Used batteries should not be disposed of with regular domestic waste! Instead, take them to your local battery disposal point.

## 8. Inserting (replacing) batteries

In the initial state, the batteries are already inserted. Simply remove the insulation strip.

To replace the batteries, please proceed as follows:

- · Press the battery compartment cover on both sides with your fingers and remove the cover by pushing it downwards.
- Insert 2 new LR6/mignon/AA (1.5 V) batteries in the battery
- compartment, making sure they are the right way round. Reattach the battery compartment cover and latch it into

The service life of new alkaline batteries is approximately 2 years. A battery symbol ( ) on the display indicates that the batteries need to be replaced. After removing the empty batteries, wait approx. 1 minute before inserting the new ones. Operation with rechargeable batteries is not possible.

Never recharge standard batteries. Doing so will present a risk of explosion. Do not throw the batteries into a fire. Do not short-circuit batteries

## 9. Set date and time

After inserting batteries, the date and time is automatically requested after a brief display of the firmware version number and short motor run ("InS").

· Set the year, month, day, hour and minute with the control wheel and confirm by pressing the control wheel shortly (F).

You can adjust the time and date in the menu under "dAt".

The motor moves the control pin backwards during the setting of date and time.

If "InS" and the rotating activity symbol "\(\bigcap\)" are displayed, the motor still reverses When only "InS" is shown in the display, the radiator thermostat can be installed

The week program and other settings can be adjusted before installation. Press the Mode/Menu button for this, while "InS" is shown in the display. You will find further information in chapter "13. Operation and configuration"

• After the programming has been completed, "InS" is shown again in the display and installation can take place.

#### 10. Installation on the radiator

The radiator thermostat is easy to install and can be done without draining heating water or intervening in the heating system. No special tools are required, nor does the heating have to be switched off. The union nut attached to the radiator thermostat can be used universally and without accessories for valves of the most popular manufacturers with a thread size of M30 x 1.5 mm.

- Rotate the thermostat dial to the maximum value (anti-clockwise). The thermostat dial then no longer presses against the valve spindle, making it easier to remove.
- Remove the mechanical thermostat head. If required, place the supplied support ring or adapt-
- Attach the radiator thermostat to the valve.

#### 10.1 Support ring and adapter for Danfoss

If required, place the provided support ring (I) into the flange before mounting the radiator thermostat to improve on the stability.

The provided adapter is required for installation on Danfoss RA valves. The Danfoss valve bodies have elongated notches (K) around their circumference, which also ensure that the adapter is properly seated when it snaps on.

During installation, please ensure that the pins inside the adapter (J) are lined During installation, please ensure that the philothical up with the notches (K) on the valve. Ensure that the adapter is properly clipped

Take care during installation that you do not trap your fingers be ween the two /!\text{halves of the adapter!



#### 11. Adaption run

After inserting batteries and mounting on the valve an adapting run ("AdA") is performed to adapt to the valve.

As soon as the radiator thermostat has been mounted to the valve, press the control wheel when "InS" is displayed.

"AdA" and the activity symbol ( ) are displayed. No operations can be performed in the meantime.

If the adapting run has been initiated prior to mounting, please press the control wheel shortly and the matter. trol wheel shortly and the motor reserves to the "InS" position. If an error message (F1, F2, F3) is displayed, the motor similarly travels back to the "InS" po-

#### 12. Display content in normal mode

Switching time periods, operating mode, setpoint temperature and weekday are displayed in normal mode.

The bars for switching time periods of the week program are displayed for every second time interval.

#### 13. Operation and configuration

After the radiator thermostat has been mounted and set up, the device can be individually operated and configured. Operation and configuration can be performed either via BLUETOOTH® with the app "calor BT" or directly on the device.

### 13.1 Operation and configuration via app

To control the device via app, please proceed as follows:

- · Download the app "calor BT" from the iOS or Android store and install the app on your smartphone
- Follow the instructions in the app.

Afterwards, you can control and configure the radiator thermostat via the app.

## 13.2 Operation and configuration on the device

Operation and configuration can be performed directly on the device. Therefore, please proceed as described in the following sections.

## 13.2.1 Week program (Pro)

In the week program, for each weekday up to 3 heating phases (7 change settings) can be set separately. The programming is carried out for the selected days, whereby temperature settings have to be set for the entire period between 00:00 and 23:59h.

• Press the Mode/Menu button for at least 3 seconds. The display will show "Pro". Confirm by pressing the control wheel shortly.

- "dAy" appears on the display. You can use the control wheel to select a single day of the week, all weekdays, the weekend, or the entire week.
- Confirm by pressing the control wheel shortly.
- The first switching time point is displayed (00:00). This cannot be changed. The heating times are displayed as bars.
- · Confirm by pressing the control wheel shortly Set the temperature which is desired from 0:00
- · Confirm by pressing the control wheel shortly.
- The next switching time point is displayed. You can adjust this individually. · Finally set the temperature which should prevail from the selected time
- You can repeat this procedure until all the other desired temperatures for the time period from 0:00 to 23:59 have been stored. If all 7 switching time points have been allocated, 23:59 is displayed as the final
- switching point to be confirmed.

In auto mode, the temperature can be changed at any time using the control wheel. The modified temperature will then remain the same until the next point at which the program changes.

## 13.2.2 Setting date and time (dAt)

Date and time can be adjusted via the menu at any time. Press the Mode/Menu button for at least 3 seconds.

- Select the menu item "dAT" with the control wheel.
- Set the year, month, day, hour and minute with the control wheel and confirm by pressing the control wheel shortly.

#### 13.2.3 Switching between summer and winter time (dSt) An automatic switching between summer and winter time can be activated and de-

- activated. The automatic switching is activated in the factory settings. · Press the Mode/Menu button for at least 3 seconds Select the menu item "dSt" with the control wheel.
- Confirm by pressing the control wheel shortly.
- The display will show "OFF" to deactivate the function or "On" to activate the function
- Confirm by pressing the control wheel shortly.

## 13.2.4 Open-window function (AEr)

With a rapidly reducing temperature, the radiator thermostat automatically detects that a room is being ventilated. In order to save heating costs, the temperature is then reduced for a certain period of time (15 minutes, set at the factory). Whilst this function is active, the "window open" symbol ( ( ) appears on the display. Press the Mode/Menu button for at least 3 seconds

- Select the menu item "AEr" with the control wheel and confirm by pressing the control wheel shortly
- The temperature and time can be set with the control wheel. The function can be deactivated by selecting "0" for the time.

## 13.2.5 Setting offset temperature (tOF)

As the temperature is measured on the radiator, the temperature distribution can vary throughout a room. To adjust this, a temperature offset of up to ±3.5 °C can be set. If a nominal temperature of e.g. 20 °C is set but the room presents with only 18 °C, an offset of -2.0 °C needs to be set.

- Press the Mode/Menu button for at least 3 seconds. Select the menu item "tOF" with the control wheel and confirm by pressing the
- control wheel shortly

- Turn the control wheel for as long as necessary until the desired temperature appears.
- Confirm by pressing the control wheel shortly

#### 13.2.6 Activate/deactivate BLUETOOTH® (bLE)

The BLUETOOTH® function of the radiator thermostat can be activated or deacti-

- Press the Mode/Menu button for at least 3 seconds.
- Select the menu item "bLE" with the control wheel and confirm by pressing the control wheel shortly.
- The display will show "OFF" to deactivate the function or "On" to activate the function.
   Confirm by pressing the control wheel shortly.
- · Press the Mode/Menu button for at least 3 seconds.
- control wheel shortly.

If, for example, you arrive home earlier than usual, the boost function will help you to heat the room up quickly. When activating the boost function, the heating valve is immediately opened to 80 % for 5 minutes. The heating of a room takes longer than

- Press the control wheel shortly to activate the boost button. The remaining time for the function will be counted down in seconds ("b300" to "b000")
- After these 5 minutes have elapsed, the actuator changes to the mode which was previously active (auto/manu) with the previously set temperature.
- The function can be deactivated prematurely at any time by pressing the control wheel again.
- The boost function will not have an immediate effect if the radiator is covered

or concealed (e.g. by a sofa). The open-window function is deactivated while the boost function is active

If you want to maintain a fixed temperature for a certain period, e.g. during your holidays or a party, the holiday function can be used.

- Briefly press the Mode/Menu button repeatedly, until the suitcase symbol (□) ap-
- and confirm by pressing the control wheel shortly.
- Then set the date and confirm by pressing the control wheel shortly.
  Set the temperature and confirm by pressing the control wheel shortly.

#### 13.2.10 Comfort and reduction temperature

Via the comfort and reduction temperature button (€\$) you can change between these two temperatures. The factory setting for the comfort temperature is 21.0  $^{\circ}\text{C}$ 

- Press and hold the comfort/reduction temperature button (₡₡) for at least 3 seconds.
- The sun symbol (☼) and the currently stored comfort temperature appear in the display.
- Change the temperature with the control wheel and confirm by pressing the control wheel shortly
- the display. Change the temperature with the control wheel and confirm by pressing the con-

Even in auto mode, the temperature can be changed at any time using the button. It

will then remain the same until the next point at which the program changes.

#### 13.2.11 Activate heating pause (battery saving)

the valve is opened fully. The calcification protection continues to run.

In order to save on battery life, you can also deactivate the BLUETOOTH® function (see sec. "13.2.6 Activate/deactivate Bluetooth® (bLE)").

To activate the heating pause, proceed as follows:

- To end it, exit the manu mode (manu) or turn the selector dial to the left
- If a room is not to be heated, the valve can be closed. The valve is only opened if there is a risk of frost. The calcification protection continues to run.
- the display

## 13.2.13 Child safeguard/operating lock

The operation of the device can be locked

- To activate/deactivate the operating lock, press the Mode/Menu and ₡☼ button
- After it has been successfully activated, "LOC" appears in the display
- To deactivate the operating lock, press both buttons again.

|                           | •                          |  |  |
|---------------------------|----------------------------|--|--|
| Error code on the display | Problem                    | Solution   |  |
| Battery symbol ( )        | Battery output too low     | Replace batteries                                |  |
| F1                        | Valve drive sluggish       | Check installation, check the heating valve      |  |
| F2                        | Actuating range too wide   | Please check mounting of the radiator thermostat |  |
| F3                        | Adjustment range too small | Check the heating valve                          |  |

The radiator thermostat performs a routine descaling run once a week on Saturday at 12:00 to protect against calcification of the valve. During this, "CAL appears in the display

CC-RT-BLE-SB Device short description: Supply voltage: 2x 1.5 V LR6/mignon/AA Current consumption: 100 mA max. Battery life: 2 years (typ.) Degree of protection: IP20 Degree of pollution: Ambient temperature: 5 to 35 °C Surface temperature: 90 °C (at the radiator) Display: Connection: LCD M30 x 1.5 mm Method of operation: Type 1 Linear travel: 4.3 mm Dimensions (W x H x D): 55 x 60 x 102 mm 162 g (incl. batteries) Radio frequency: 2.402 GHz - 2.480 GHz Open area RF range: 10 m (typ.)

The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by eQ-3 AG is under license. Other trademarks and trade names are those of their respective owners.

**SWISSBRANDS** SWISSBRANDS GmbH





13.2.7 Restore factory settings (rES)

#### The factory settings of the radiator thermostat can be restored manually. If you do this, you will lose all your settings.

- Select the menu item "rES" with the control wheel and confirm by pressing the
- "COnF" then appears in the display.
  Confirm by pressing the control wheel shortly.
- 13.2.8 Boost function

# 5 minutes, but the heat given off by the radiator can be felt immediately.

- pears in the display. Change the time until which the temperature shall remain with the control wheel
- The set temperature will remain until the set end time. Afterwards, the radiator thermostat will switch back to auto mode.

and the reduction temperature 17.0 °C.

The moon symbol (C) and the currently stored reduction temperature appear in

trol wheel shortly.

Battery life can be prolonged by switching the heating off in summer. To achieve this

13.2.12 Set frost protection mode

Turn the control wheel in manu mode (manu) to the left until "OFF" appears in

## To end it, exit the manu mode (manu) or turn the control wheel to the right.

at the same time.

| 14. Troubleshooting and maintenance |                        |   |  |  |
|-------------------------------------|------------------------|---|--|--|
| Error code on the display           | Problem                | Solution                                    |  |  |
| Battery symbol ( )                  | Battery output too low | Replace batteries                           |  |  |
| F1                                  | Valve drive sluggish   | Check installation, check the heating valve |  |  |
|                                     |                        | Please check                                |  |  |

Subject to technical changes.

Romain-Rolland-Str. 14-24 Technische Änderungen vorbehalter 13089 Berlin / Germany Abbildungen ähnlich

